



Inverter Circuit Breaker Installation

for connecting an additional inverter to the Backup Interface (BI-N and BI-E models)

A. Power off the system and open the Backup Interface

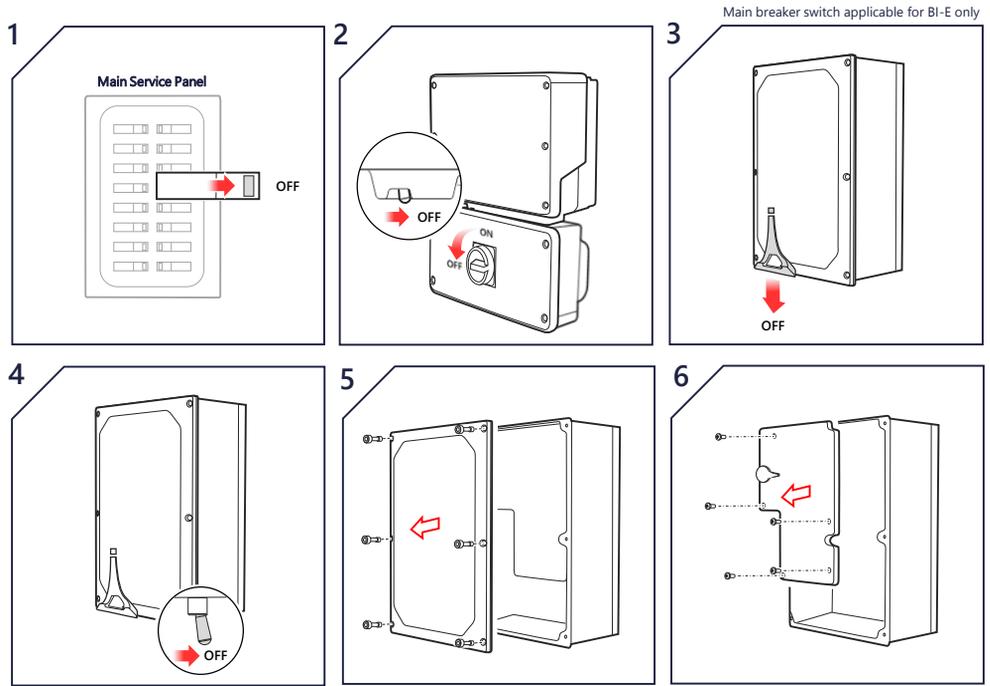


B. Install the circuit breaker

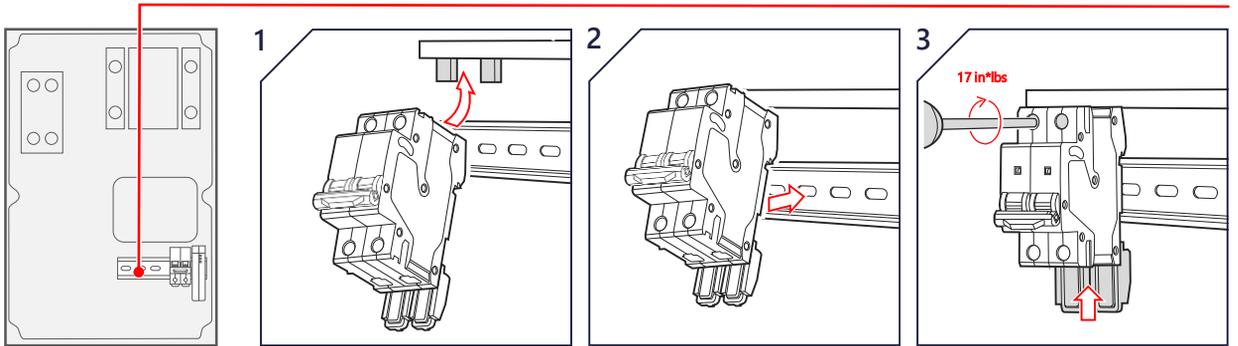

C. Mount the dead front

5 screws in BI-N; 6 screws in BI-E

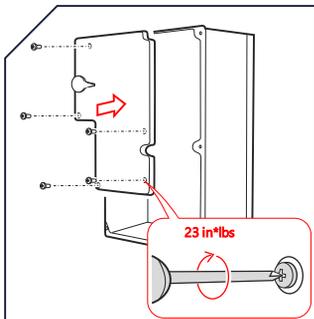

D. Connect an additional inverter

See the Backup Interface (BI-N) installation guide



See the Backup Interface (BI-E) installation guide

